


Program Mode Guide Sheet

Covering Transactive Xtra and TX Advance Models

This document will guide you on how to access and edit all ceiling lift settings within the program mode. This includes setting the lifting amps, setting the traverse speed, viewing maintenance data, and setting the Preventive Maintenance.

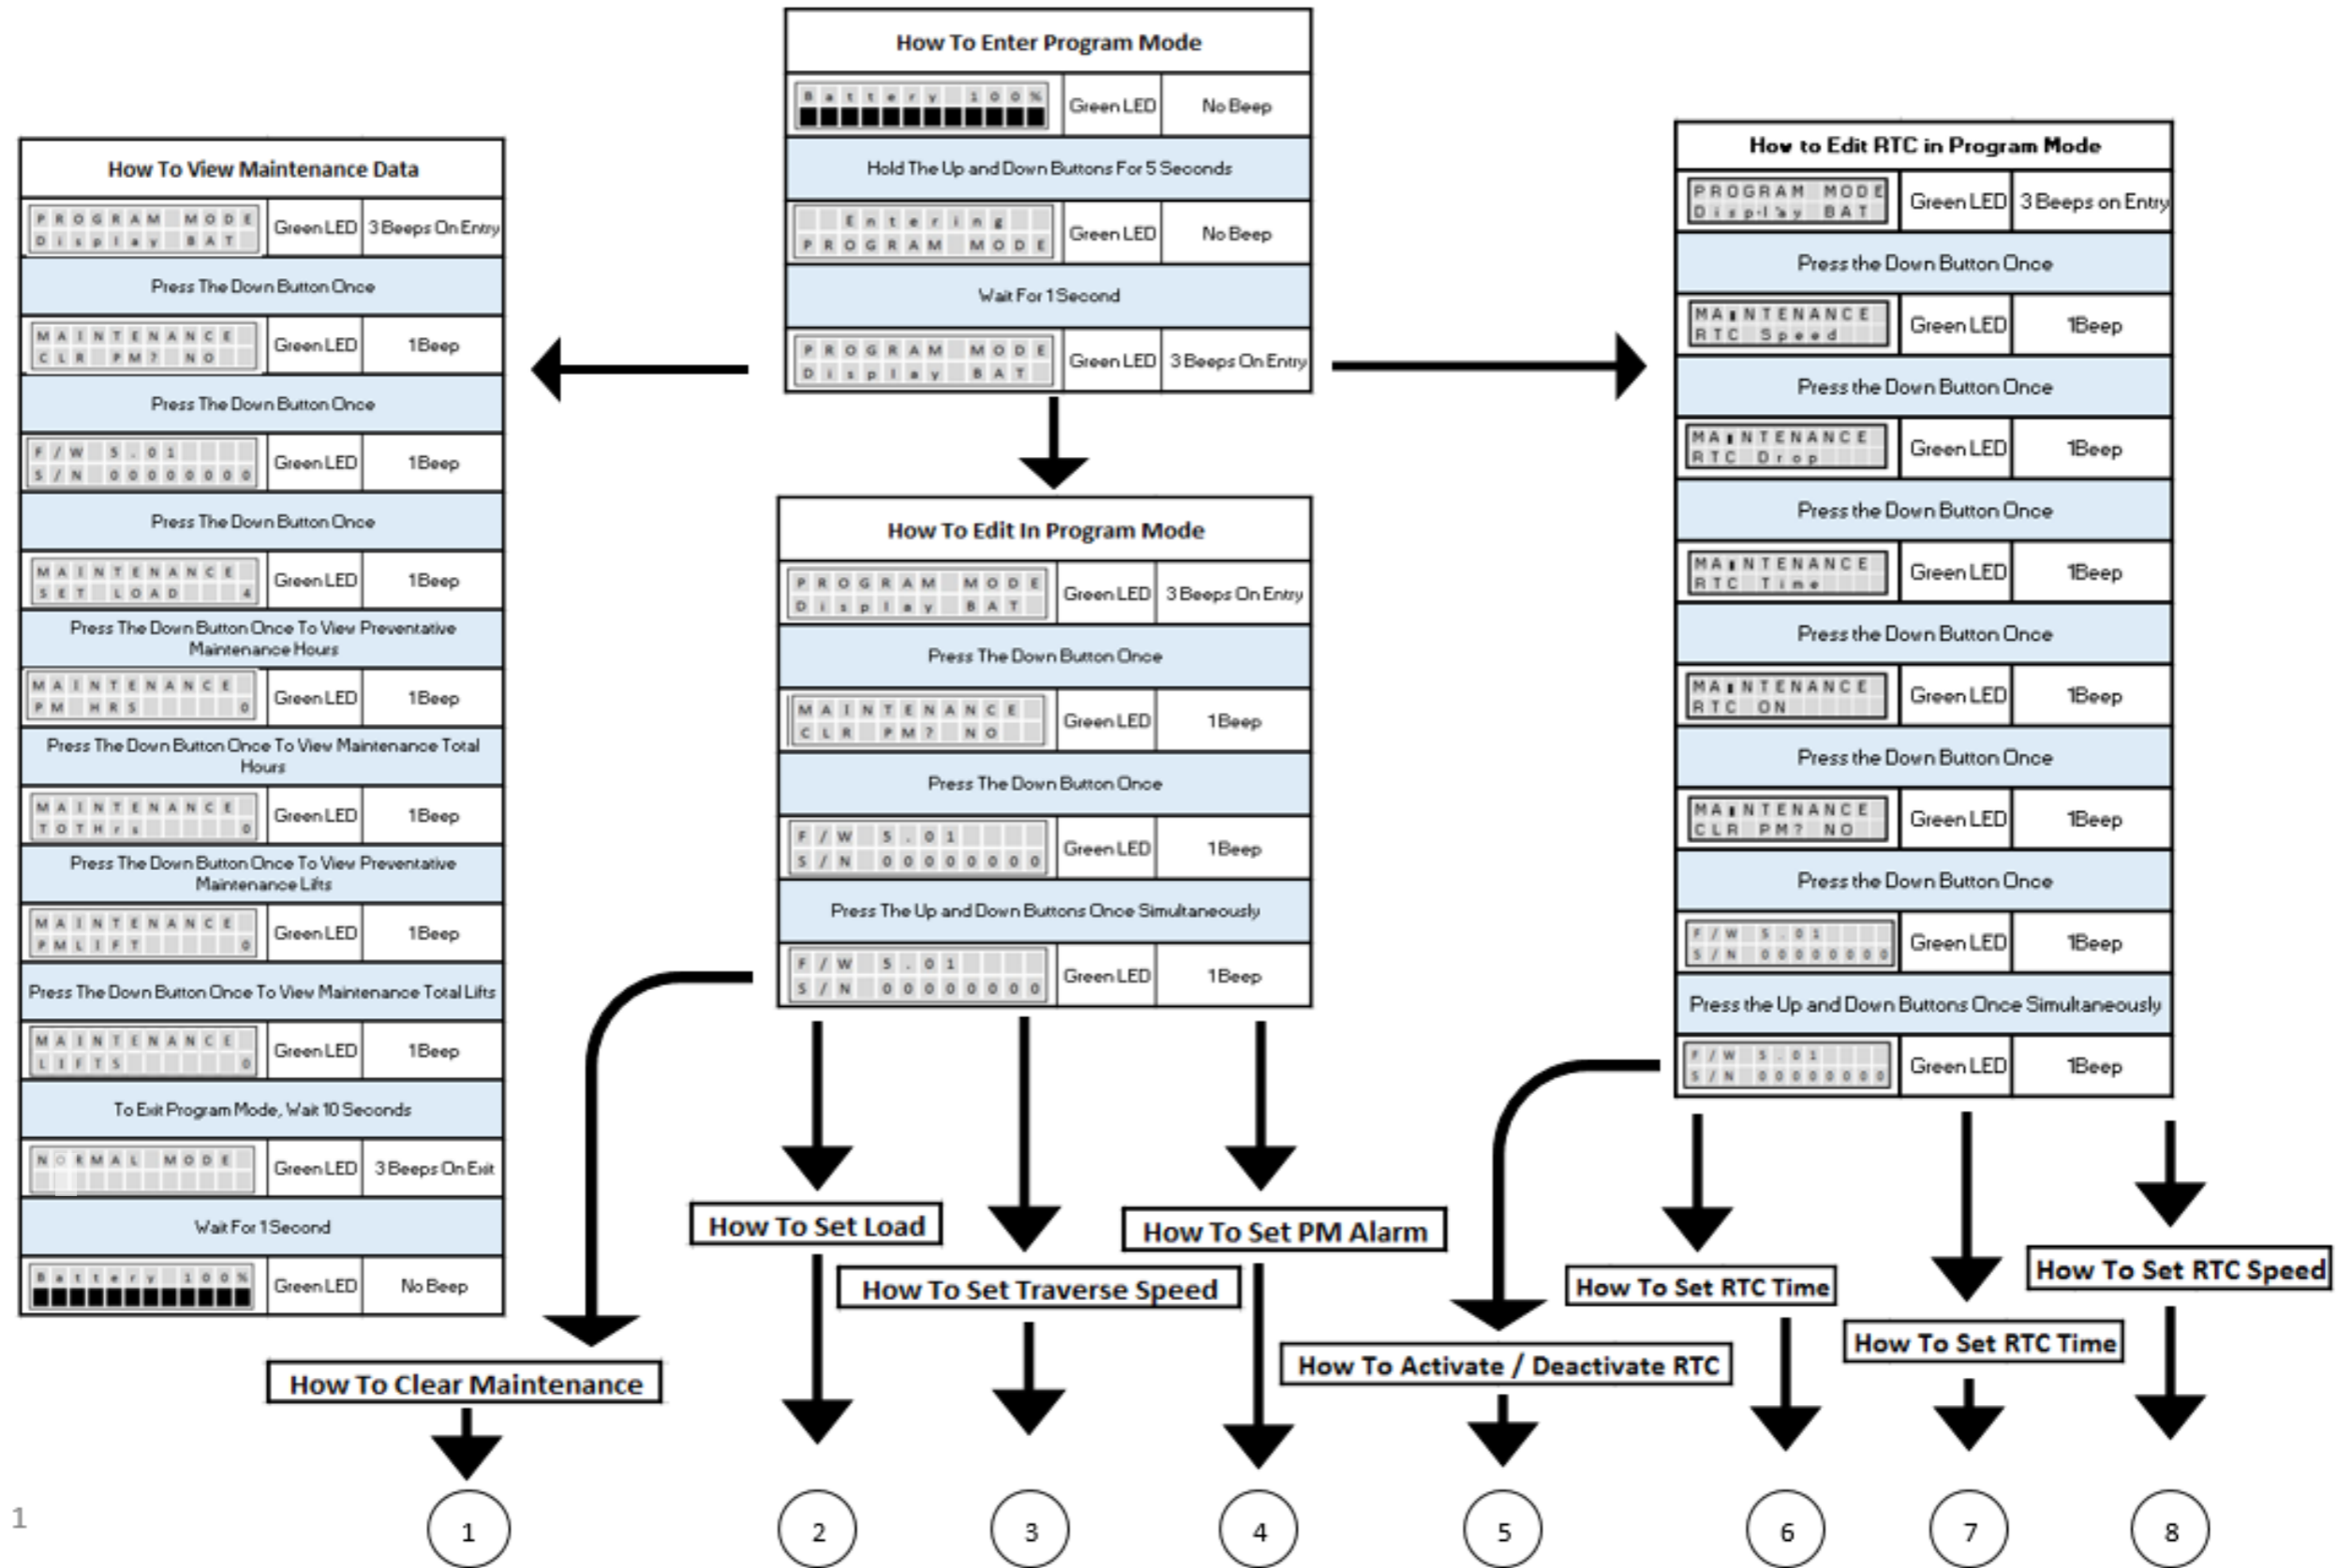



How To Clear Maintenance		
F / W 5 . 0 1 S / N 0 0 0 0 0 0 0 0	Green LED	1Beep
Press The Up Button Once		
MAINTENANCE CLR PM? NO	Green LED	1Beep
Press The Up and Down Buttons Once Simultaneously ("NO" on LCD will flicker)		
MAINTENANCE CLR PM? NO	Green LED	1Beep
Press The Up Button Once ("YES" on LCD will flicker)		
MAINTENANCE CLR PM? YES	Green LED	1Beep
Press The Up and Down Buttons Once Simultaneously		
MAINTENANCE CLR PM? YES	Green LED	1Beep
To Exit Program Mode, Wait 10 Seconds		
NORMAL MODE	Green LED	3 Beeps On Exit
Wait For 1 Second		
Battery 100%	Green LED	No Beep



How To Set Load		
F / W 5 . 0 1 S / N 0 0 0 0 0 0 0 0	Green LED	1Beep
Press The Down Button Once		
MAINTENANCE SET LOAD 4	Green LED	1Beep
Press The Up and Down Buttons Once Simultaneously ("4" on LCD will flicker)		
MAINTENANCE SET LOAD 4	Green LED	1Beep
Press The Up/Down Button To Set Load (The Current Number on LCD will flicker)		
MAINTENANCE SET LOAD 2 4	Green LED	1Beep
Press The Up/Down Buttons Simultaneously To Confirm Set Load		
MAINTENANCE SET LOAD 2 4	Green LED	1Beep
To Exit Program Mode, Wait 10 Seconds		
NORMAL MODE	Green LED	3 Beeps On Exit
Wait For 1 Second		
Battery 100%	Green LED	No Beep



How To Set Traverse Speed		
F / W 5 . 0 1 S / N 0 0 0 0 0 0 0 0	Green LED	1Beep
Press The Up Button Once		
MAINTENANCE CLR PM? NO	Green LED	1Beep
Press The Up Button Once		
PROGRAM MODE Display BAT	Green LED	1Beep
Press The Up Button Once		
PROGRAM MODE Trav 2	Green LED	1Beep
Press The Up and Down Buttons Once Simultaneously ("2" on LCD will flicker)		
PROGRAM MODE Trav 2	Green LED	1Beep
Press The Up/Down Button To Set Traverse Speed (The Current Number on LCD will flicker)		
PROGRAM MODE Trav 5	Green LED	1Beep
Press The Up and Down Buttons Simultaneously To Confirm Set Traverse Speed		
PROGRAM MODE Trav 5	Green LED	1Beep
To Exit Program Mode, Wait 10 Seconds		
NORMAL MODE	Green LED	3 Beeps On Exit
Wait For 1 Second		
Battery 100%	Green LED	No Beep



How To Set PM Alarm		
F / W 5 . 0 1 S / N 0 0 0 0 0 0 0 0	Green LED	1Beep
Press The Up Button Once		
MAINTENANCE CLR PM? NO	Green LED	1Beep
Press The Up Button Once		
PROGRAM MODE Display BAT	Green LED	1Beep
Press The Up Button Once		
PROGRAM MODE Trav 2	Green LED	1Beep
Press The Up Button Once		
PROGRAM MODE PM Alarm ON	Green LED	1Beep
Press The Up and Down Buttons Once Simultaneously ("ON" on LCD will flicker)		
PROGRAM MODE PM Alarm ON	Green LED	1Beep
Press The Up/Down Button To Set PM Alarm ("OFF" on LCD will flicker)		
PROGRAM MODE PM Alarm OFF	Green LED	1Beep
Press The Up and Down Buttons Simultaneously To Confirm Set PM Alarm		
PROGRAM MODE PM Alarm OFF	Green LED	1Beep
To Exit Program Mode, Wait 10 Seconds		
NORMAL MODE	Green LED	3 Beeps On Exit
Wait For 1 Second		
Battery 100%	Green LED	No Beep

5

How To Activate / Deactivate RTC		
F/W 5.01 S/N 00000000	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE CLR PM? NO	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE RTC ON	Green LED	1Beep
Press the Up and Down Button Simultaneously "ON" on the LCD will flicker		
MAINTENANCE RTC ON	Green LED	1Beep
Press the Up/Down button to alter parameters		
MAINTENANCE RTC OFF	Green LED	1Beep
Press the Up and Down Button Simultaneously to confirm parameter		
MAINTENANCE RTC OFF	Green LED	1Beep
To Exit Program, Wait 10 Seconds		
NORMAL MODE	Green LED	Sustained Beep
Wait For 1 Second		
BATTERY 100%	Green LED	1Beep

6

How To Set RTC Time		
F/W 5.01 S/N 00000000	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE CLR PM? NO	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE RTC ON	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE RTC Time 60	Green LED	1Beep
Press the Up and Down Button Simultaneously "60" on the LCD will flicker		
MAINTENANCE RTC Time 60	Green LED	1Beep
Press the Up/Down button to alter parameters		
MAINTENANCE RTC Time 120	Green LED	1Beep
Press the Up and Down Button Simultaneously to confirm parameter		
MAINTENANCE RTC Time 120	Green LED	1Beep
To Exit Program, Wait 10 Seconds		
NORMAL MODE	Green LED	Sustained Beep
Wait For 1 Second		
BATTERY 100%	Green LED	1Beep

7

How To Set RTC Time		
F/W 5.01 S/N 00000000	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE CLR PM? NO	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE RTC ON	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE RTC Time 60	Green LED	1Beep
Press the Up and Down Button Simultaneously "60" on the LCD will flicker		
MAINTENANCE RTC Drop 15	Green LED	1Beep
Press the Up/Down button to alter parameters		
MAINTENANCE RTC Drop 24	Green LED	1Beep
Press the Up and Down Button Simultaneously to confirm parameter		
MAINTENANCE RTC Drop 24	Green LED	1Beep
To Exit Program, Wait 10 Seconds		
NORMAL MODE	Green LED	Sustained Beep
Wait For 1 Second		
BATTERY 100%	Green LED	1Beep

8

How To Set RTC Time		
F/W 5.01 S/N 00000000	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE CLR PM? NO	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE RTC ON	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE RTC Time 60	Green LED	1Beep
Press the Up Button Once		
MAINTENANCE RTC Drop 15	Green LED	1Beep
Press the Up and Down Button Simultaneously "60" on the LCD will flicker		
MAINTENANCE RTC Speed 4	Green LED	1Beep
Press the Up/Down button to alter parameters		
MAINTENANCE RTC Speed 8	Green LED	1Beep
Press the Up and Down Button Simultaneously to confirm parameter		
MAINTENANCE RTC Speed 8	Green LED	1Beep
To Exit Program, Wait 10 Seconds		
NORMAL MODE	Green LED	Sustained Beep
Wait For 1 Second		
BATTERY 100%	Green LED	1Beep