Freeway Transactive Xtra Hoist Troubleshooting Guide Troubleshooting Revision: A Guide Scenario: Revision Date: 08/24 Hoist does not interact with auxiliary output Doc No. 990075-7 When operating the hand controls, the hoist has power and performs the usual lifting and lowering actions, but does not respond to auxiliary output commands. -YES/UNSURE-Document No. 990SD-04 The handset auxiliary buttons on the air tubes may be damaged/leaking -Unresolved?--NO Unresolved? Inspect the full length of the auxiliary beak Unresolved? cables and connection points Testing Guide - Document NO No. 990SD-10 Key:

> Additional Context and Actions