

Freeway Transactive Xtra CTH Troubleshooting Guide

Scenario: Hoist LED is not functioning

When operating the hand controls, the hoist has power and performs the usual lifting and lowering actions, but the LED is not functioning

Are there any visible defects to the LED and its wiring?

YES

Replace the LED (bottom cover) assembly

Defects include cracked casing, burns or damaged wiring


NO

Unresolved?

Is the LED cable connected to the PCB?

NO

Plug the LED cable back into the PCB port

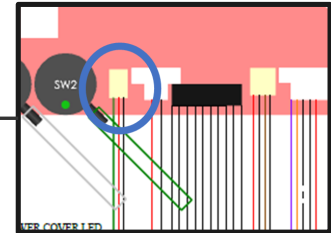

Unresolved?

YES

See PCB and LED Testing Guide - Document No. 990SD-11

Key:

Question

Action

Component Replacement

Supporting Document

Additional Context and Actions