


# Mackworth TX Ceiling Lift Troubleshooting Guide

## Scenario: Ceiling Lift does not raise and lower - High Current

When operating the hand controls, the ceiling lift LCD indicates "High Current" and an audible alarm will continuously beep for 3 seconds.

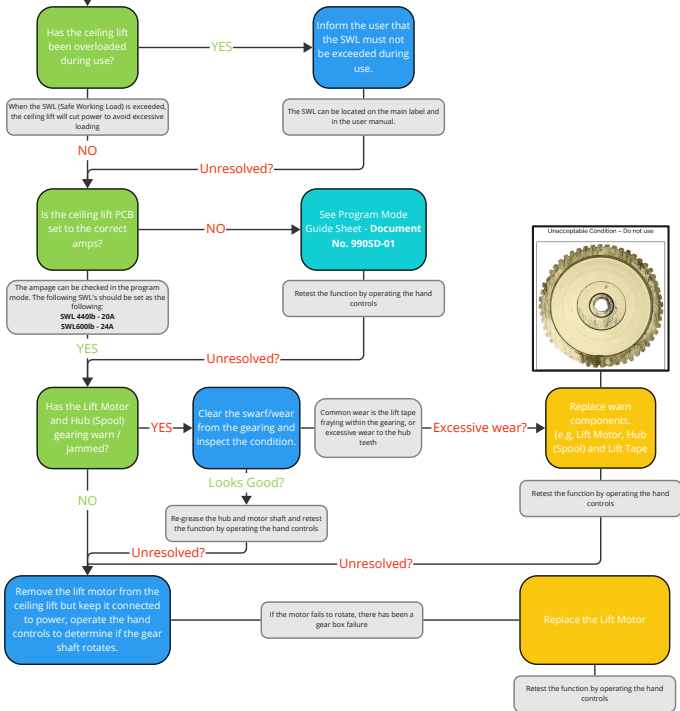

**Key:**

